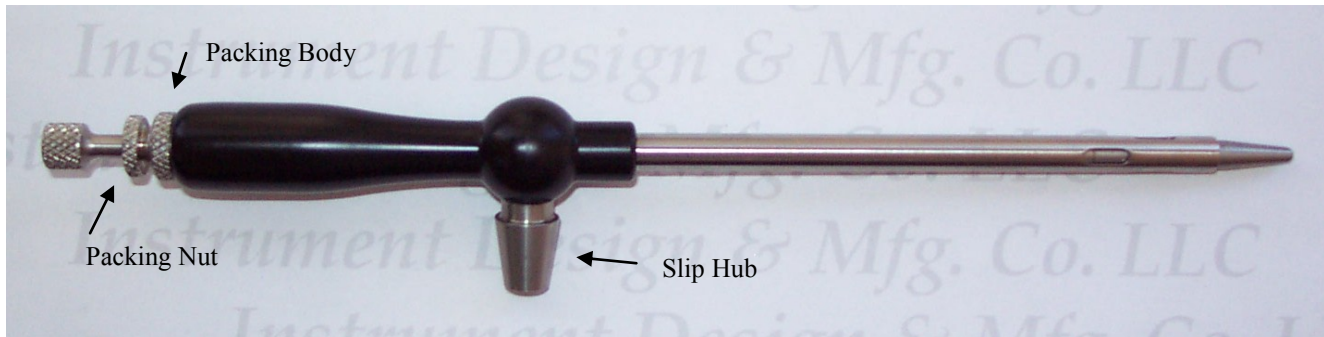


INSTRUMENT DESIGN & MFG. CO.**Pro Series Drain Tube™**

Pro Series Drain Tubes feature precision machined light weight high performance black Delrin body. Stainless Steel Tube and Components resist corrosion and will not chip. Four precision machined slots provide for increased flow. Easily disassembled for cleaning.

PRODUCT INSTRUCTIONS

The Pro Series Drain Tube™ functions like most drain tubes.

1. Attach drain hose to slip hub
2. Insert into artery with probe in the full forward position
3. Pull probe back all the way to begin flow, push forward to slow or stop flow.

Cleaning:

1. Unscrew Packing Body to remove rod and probe.
2. Flush with water and disinfect. (Do Not Autoclave or leave submerged in disinfectant)
3. Reverse to reassemble.

Adjustment:

Turn Packing Nut to adjust rod tension and stop any leaking.

• <i>Stainless Steel Construction</i>	<i>Available sizes:</i>	
• <i>Solid Black Delrin Body</i>	<i>DRNPS187x5 3/16" x 5"</i>	<i>DRNPS187x9 3/16" x 9"</i>
• <i>4 Precision Drain Slots</i>	<i>DRNPS25 x5 1/4" x 5"</i>	<i>DRNPS250x9 1/4" x 9"</i>
• <i>Easy to Disassemble</i>	<i>DRNPS312x5 5/16" x 5"</i>	<i>DRNPS312x9 5/16" x 9"</i>
• <i>Easy to Clean</i>	<i>DRNPS375x5 3/8" x 5"</i>	<i>DRNPS375x9 3/8" x 9"</i>

INSTRUMENT DESIGN & MFG. CO.

25 Harvey Road
Unit 6
Bedford, NH 03110

Phone: 603-606-5412
Fax: 603-606-5101
E-mail: sales@embalminginstrument.com
Web Site: www.embalminginstrument.com